

Data overview


The **Data** page allows you to offload all logged data from the device.

Set up data offload paths

Before logged data is offloaded, you need to set up the offload paths on the **Settings** page.


Set the offload path

On the **Settings** page, the data offload 'Root Path' is the file storage location on your device, or on an external device. Select the three dots (...) icon to browse and select the storage folder. Or you can copy and paste the file path from Windows File Explorer into the 'Root Path'.

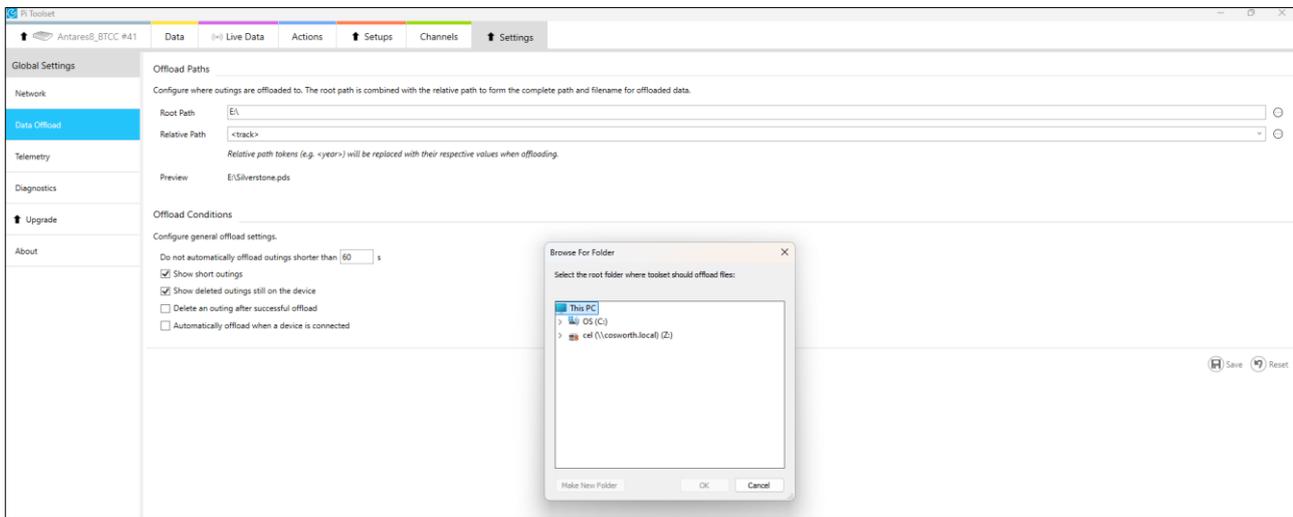


Set the relative path


The relative path is the naming convention used for the offloaded data. This identifies data by offloading files in a specific format or name.

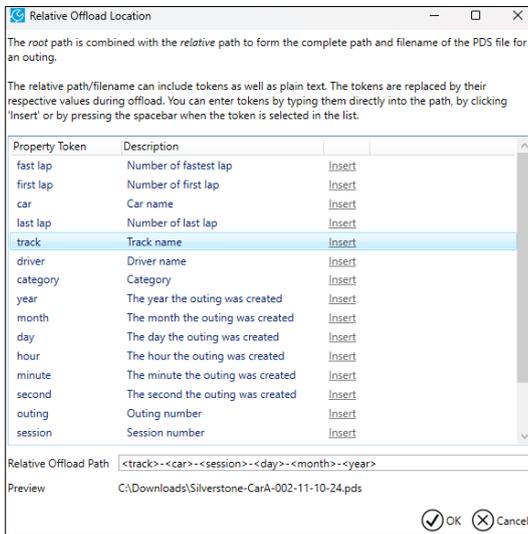

Click the three dots next to 'Relative Path' to set the naming convention to include track name, driver name, car number, session number, day, month, year, and so on.

For example, the track name and session name/number are sourced from the settings on the **Data** page or the outing properties after you select an outing when connected to the device.

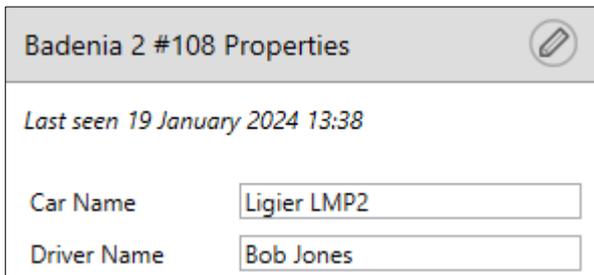

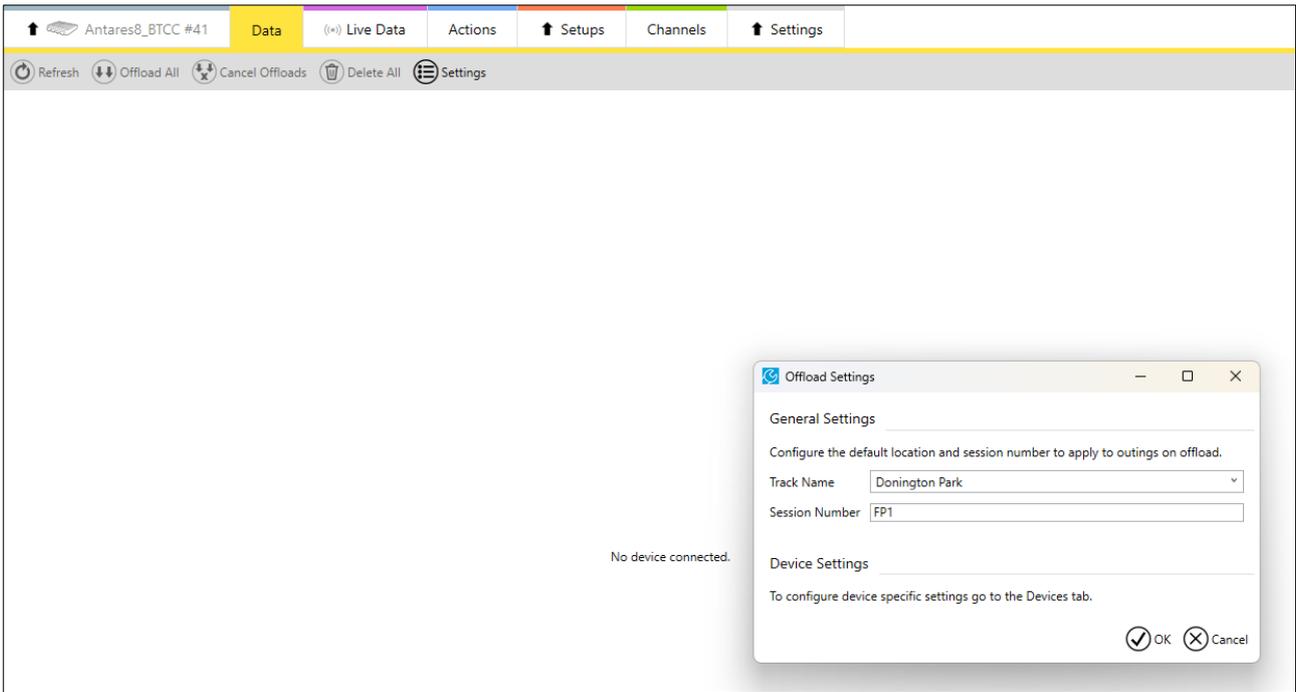


The car and driver name are sourced from the device properties on the **Devices** page. Other parameters such as lap number, date, and time are sourced from the logged data.

Note: Make sure that you save data offload settings using the **Save** option before you offload data.

Set offload conditions


Offload conditions can be checked to automatically, hide, download, and delete outings. For example, you can configure Toolset to automatically offload data when the device is connected, and to delete the outing after a successful download.

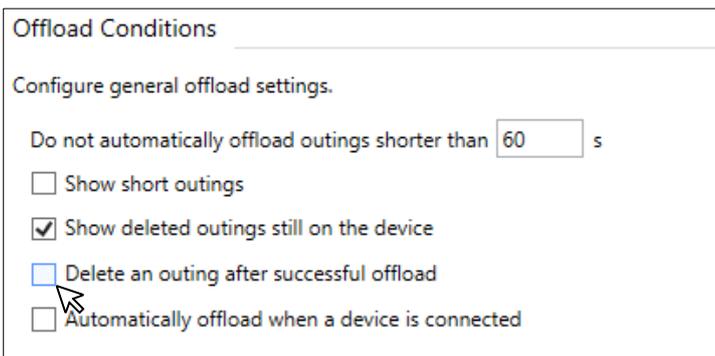


Offload logged data

Logged data (also known as outings) is displayed on the **Data** page. Outings from each device are shown under the name of the device. If outings are not displayed, click **Refresh** (1). To offload individual outings, click **Offload** (2) on each outing file. You can also offload all outings via the **Offload All** option (3).

Note: If no outings are displayed when you log short outings, check that the **Show Short Outings** option is selected (4). You can configure the duration of a short outing on the **Settings** page.

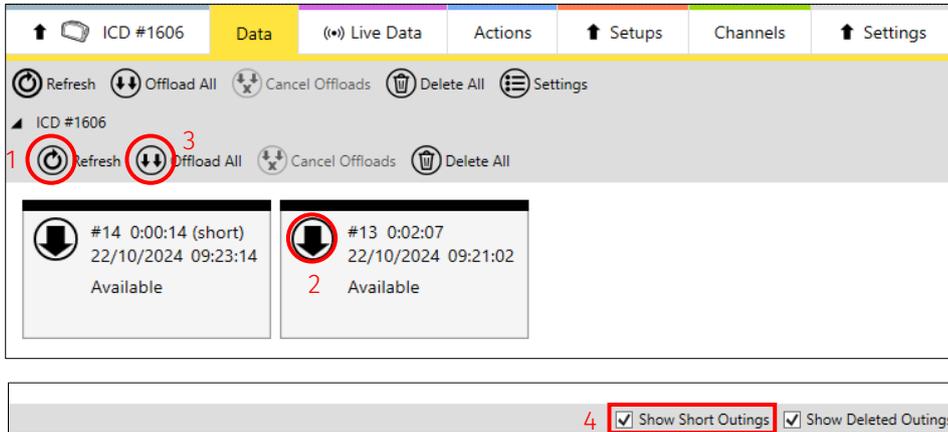


Click on an outing file (1) to display its properties on the right-hand side of the window. These include outing number, date and time, track name, driver name, car name, and comments, all of which you can edit (2). These details are stored in the outing file for reference.

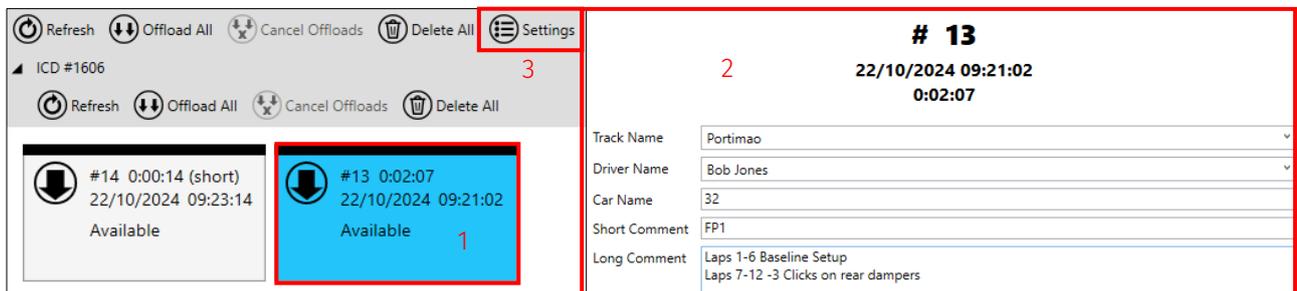


To offload multiple pieces of data with the same properties, select **Settings** (3), and then configure the relevant properties. These properties are applied to all selected offloads.

Click **Offload** to start the download from the device to a specified location. You can select multiple outings to queue for delivery. The progress and status of the download is displayed.

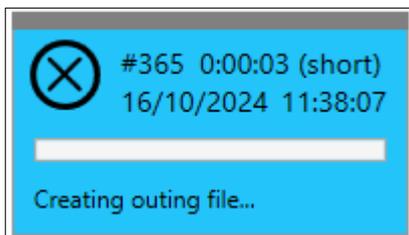




When successfully downloaded, the outing is marked as 'Offloaded' and highlighted in green.

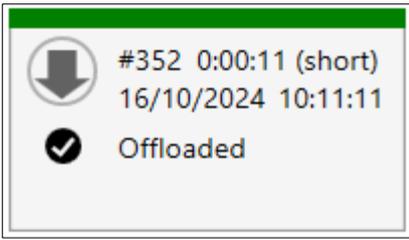

If an outing offload fails, the outing is marked as 'Offload Failed' and highlighted in red. Hover over the outing to display the cause of the failure.

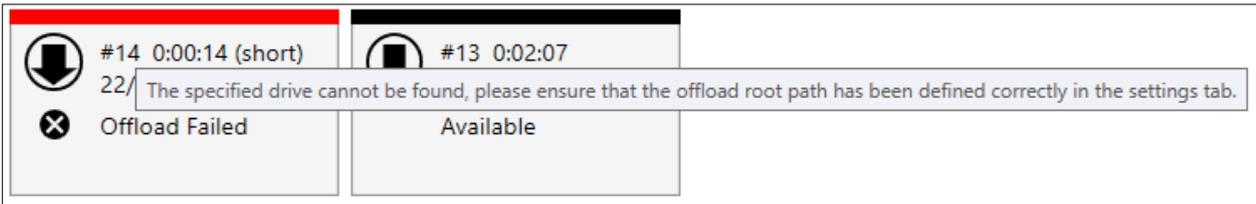

If errors continue, close Toolset, and then navigate to: *C:\Pi Research\Toolset\[Toolset Version]\Logs\Pi Toolset\Log*. Open the log file and check for specific device errors. If you cannot identify the errors, then please send a message to: electronics.support@cosworth.com.

From the **Outing Properties** window, you can open the outing directly in Toolbox if the application is open.

